

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Уда (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru

Shopping Cart Casters



K2-ST-5000 TPR caster with PP core, ball bearing

100 × 32		130	130	38	28/22x44.5	K2-ST-5000-100
125 × 32		140	154	41	28/22x44.5	K2-ST-5000-125

K2-SC-5000 TPR caster with PP core, ball bearing

100 × 32		130	130	38	M12 x 30	K2-SC-5000-100
125 × 32		140	154	41	M12 x 30	K2-SC-5000-125

K2-BH-5000 TPR caster with PP core, ball bearing

100 × 32		130	130	38	12.5/10.5	K2-BH-5000-100
125 × 32		140	154	41	12.5/10.5	K2-BH-5000-125


 



 

 
 
K2-ST-5000PU PU caster with PP core, ball bearing

100 × 32		130	130	38	28/22x44.5	K2-ST-5000PU-100
125 × 32		180	154	41	28/22x44.5	K2-ST-5000PU-125


 

 
 
 
 


K2-SC-5000PU PU caster with PP core, ball bearing

						
100×32		130	130	38	M12 x 30	K2-SC-5000PU-100
125×32		180	154	41	M12 x 30	K2-SC-5000PU-125


 

 
 
 



K2-BH-5000PU PU caster with PP core, ball bearing

						
100×32		130	130	38	12.5/10.5	K2-BH-5000PU-100
125×32		180	154	41	12.5/10.5	K2-BH-5000PU-125


 

 
 
 


 
K2-ST-5200 TPR caster with PP core, plain bearing

						
100×32		100	130	38	28/22x44.5	K2-ST-5200-100
125×32		120	154	41	28/22x44.5	K2-ST-5200-125


 

 
 
 


 
K2-SC-5200 TPR caster with PP core, plain bearing

						
100×32		100	130	38	M12 x 30	K2-SC-5200-100
125×32		120	154	41	M12 x 30	K2-SC-5200-125


 

 
 
 

 

K2-BH-5200 TPR caster with PP core, plain bearing

						
100×32		100	130	38	12.5/10.5	K2-BH-5200-100
125×32		120	154	41	12.5/10.5	K2-BH-5200-125

K2-ST-5300 TPR caster with PP core, plain bearing

						
100×32		100	130	38	28/22x44.5	K2-ST-5300-100
125×32		120	154	41	28/22x44.5	K2-ST-5300-125


 


 
 


 
K2-SC-5300 TPR caster with PP core, plain bearing

						
100×32		100	130	38	M12 x 30	K2-SC-5300-100
125×32		120	154	41	M12 x 30	K2-SC-5300-125


 

 
 
 



K2-BH-5300 TPR caster with PP core, plain bearing

						
100×32		100	130	38	12.5/10.5	K2-BH-5300-100
125×32		120	154	41	12.5/10.5	K2-BH-5300-125

 



 
 

 
 
K2-ST-5700 Elastic rubber caster with PP core, ball bearing

						
100×32		150	130	38	28/22×44.5	K2-ST-5700-100
125×32		200	154	41	28/22×44.5	K2-ST-5700-125


 







K2-SC-5700 Elastic rubber caster with PP core, ball bearing

						
100×32		150	130	38	M12 x 30	K2-SC-5700-100
125×32		200	154	41	M12 x 30	K2-SC-5700-125

 

K2-BH-5700 Elastic rubber caster with PP core, ball bearing

						
100×32		150	130	38	12.5/10.5	K2-BH-5700-100
125×32		200	154	41	12.5/10.5	K2-BH-5700-125




 

 


 
 




K-E05 TPR caster with PP core, plain bearing

						
100×32		70	130	38	Φ12	K-E05-100
125×32		80	154	41	Φ12	K-E05-125


K-E07 TPR caster with PP core, plain bearing

						
100×32		70	130	38	M10×20	K-E07-100
125×32		80	154	41	M10×20	K-E07-125


 

 

 
 
 
 
K-F05 TPR caster with PP core, plain bearing

										
100×32		90		70	130	38	Φ12	(Roller bearing)	K-F05-100	K-F05-100-1
125×32		110		80	154	41	Φ12	(Roller bearing)	K-F05-125	K-F05-125-1

K-F07 TPR caster with PP core, plain bearing

											
		kg		kg					(Roller bearing)		(Plain bearing)
100×32		90		70	130	38	M10×20		K-F07-100		K-F07-100-1
125×32		110		80	154	41	M10×20		K-F07-125		K-F07-125-1

K-G05 TPR caster with PP core, ball bearing

						
100×32		90	130	38	Φ12	K-G05-100
125×32		110	154	41	Φ12	K-G05-125

K-G07 TPR caster with PP core, ball bearing

						
100×32		90	130	38	M10×20	K-G07-100
125×32		110	154	41	M10×20	K-G07-125

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru