

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru

Institutional rollers with a rotating top plate



3003 TPR caster with PP core, ball bearing

								
50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3003-50
75×25		70	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3003-75
100×27		100	76×76	55×55	15.5×8.5	134	37	3003-100
125×27		130	76×76	55×55	15.5×8.5	157	45	3003-125

3004 TPR caster with PP core, ball bearing

50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3004-50
75×25		70	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3004-75
100×27		100	76×76	55×55	15.5×8.5	134	35	103	3004-100
125×27		130	76×76	55×55	15.5×8.5	157	38	103	3004-125

3013 TPR caster with PP core, plain bearing

								
50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3013-50
75×25		60	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3013-75
100×27		90	76×76	55×55	15.5×8.5	134	37	3013-100
125×27		120	76×76	55×55	15.5×8.5	157	45	3013-125

3013A TPR caster with PP core, plain bearing

								
50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3013A-50
75×25		60	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3013A-75
100×27		90	76×76	55×55	15.5×8.5	134	37	3013A-100
125×27		120	76×76	55×55	15.5×8.5	157	45	3013A-125

3014 TPR caster with PP core, plain bearing

									
50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3014-50
75×25		60	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3014-75
100×27		90	76×76	55×55	15.5×8.5	134	35	103	3014-100
125×27		120	76×76	55×55	15.5×8.5	157	38	103	3014-125

3014A TPR caster with PP core, plain bearing

									
50×20		40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3014A-50
75×25		60	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3014A-75
100×27		90	76×76	55×55	15.5×8.5	134	35	103	3014A-100
125×27		120	76×76	55×55	15.5×8.5	157	38	103	3014A-125

3023 Nylon caster with PP core, plain bearing or roller bearing

									
50×20			45	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3023-50
75×24			80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3023-75
100×30			120	76×76	55×55	15.5×8.5	134	37	3023-100
125×30			150	76×76	55×55	15.5×8.5	157	45	3023-125

3024 Nylon caster with PP core, plain bearing or roller bearing

										
50×20			45	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3024-50
75×24			80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3024-75
100×30			120	76×76	55×55	15.5×8.5	134	35	103	3024-100
125×30			150	76×76	55×55	15.5×8.5	157	38	103	3024-125

3033 TPR caster with PP core, plain bearing or roller bearing

									
50×20			40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3033-50
75×24			70	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3033-75
100×30			100	76×76	55×55	15.5×8.5	134	37	3033-100
125×30			130	76×76	55×55	15.5×8.5	157	45	3033-125

3034 TPR caster with PP core, plain bearing or roller bearing

										
50×20			40	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3034-50
75×24			70	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3034-75
100×30			100	76×76	55×55	15.5×8.5	134	35	103	3034-100
125×30			130	76×76	55×55	15.5×8.5	157	38	103	3034-125

3043 PU caster with PP core, plain bearing or roller bearing

								
50×20		45	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3043-50
75×24		80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3043-75
100×30		120	76×76	55×55	15.5×8.5	134	37	3043-100
125×30		150	76×76	55×55	15.5×8.5	157	45	3043-125

3044 PU caster with PP core, plain bearing or roller bearing

									
50×20		45	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3044-50
75×24		80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3044-75
100×30		120	76×76	55×55	15.5×8.5	134	35	103	3044-100
125×30		150	76×76	55×55	15.5×8.5	157	38	103	3044-125

3053 Grey rubber caster with PP core, plain bearing

								
50×17		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3053-50
75×21		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3053-75
100×26		80	76×76	55×55	15.5×8.5	134	37	3053-100
125×26		100	76×76	55×55	15.5×8.5	157	45	3053-125

3054 Grey rubber caster with PP core, plain bearing

									
50×17		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3054-50
75×21		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3054-75
100×26		80	76×76	55×55	15.5×8.5	134	35	103	3054-100
125×26		100	76×76	55×55	15.5×8.5	157	38	103	3054-125

3055 Grey rubber caster with PP core, plain bearing

								
50X17		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3055-50
75X21		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3055-75
100X26		80	76×76	55×55	15.5×8.5	134	37	3055-100
125X26		100	76×76	55×55	15.5×8.5	157	45	3055-125

3072 Black rubber caster with PP core, plain bearing

								
50x17		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3072-50
75x21		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3072-75
100x26		80	76×76	55×55	15.5×8.2	134	37	3072-100
125x26		100	76×76	55×55	15.5×8.2	157	45	3072-125

3073 Black rubber caster with PP core, plain bearing

									
50x17		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3073-50
75x21		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3073-75
100x26		80	76×76	55×55	15.5×8.2	134	35	103	3073-100
125x26		100	76×76	55×55	15.5×8.2	157	38	103	3073-125

3082B PP caster, plain bearing

								
50×20		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3082B-50
75×25		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3082B-75
100×27		70	76×76	55×55	15.5×8.5	134	37	3082B-100
123x27		90	76×76	55×55	15.5×8.5	156	45	3082B-123

3082-PA Nylon caster, plain bearing

								
50×20		50	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	24	3082-50-PA
75×25		80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	29	3082-75-PA
100×27		100	76×76	55×55	15.5×8.5	134	37	3082-100-PA
125×27		120	76×76	55×55	15.5×8.5	157	45	3082-125-PA

3083B PP caster, plain bearing

									
50×20		25	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3083B-50
75×25		50	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3083B-75
100×27		70	76×76	55×55	15.5×8.5	134	35	103	3083B-100
123x27		90	76×76	55×55	15.5×8.5	156	38	103	3083B-123

3083-PA Nylon caster, plain bearing

									
50×20		50	60×60/50×50	43×43/35×35	13×6.3/12×6.3	69.5	22	73	3083-50-PA
75×25		80	65×65/60×60	48×48/43×43	12×6.3/13×6.3	100	33	84	3083-75-PA
100×27		100	76×76	55×55	15.5×8.5	134	35	103	3083-100-PA
125×27		120	76×76	55×55	15.5×8.5	157	38	103	3083-125-PA

Алматы (7273)495-231
 Ангартск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru