

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru

Industrial Rollers with Bolt Hole



A-M05 Elastic rubber caster with nylon core, roller bearing or plain bearing

			kg				(Roller bearing)	(Plain bearing)
80X34			80	35	109	12.5		A-M05-80
100X32			100	38	127	12.5	A-M05-100	A-M05-100-1
125X36			120	35	150	12.5	A-M05-125-1	
125X50			150	55	158	16.5	A-M05-125	
160X50			250	57	189	16.5	A-M05-160	
200X50			300	60	229	16.5	A-M05-200	

 
A-M06 Elastic rubber caster with nylon core, roller bearing or plain bearing

			kg					(Roller bearing)	(Plain bearing)
80X34			80	35	109	12.5	101		A-M06-80
100X32			100	37	127	12.5	104	A-M06-100	A-M06-100-1
125X36			120	35	150	12.5	108	A-M06-125-1	
125X50			150	52	158	16.5	148	A-M06-125	
160X50			250	57	189	16.5	145	A-M06-160	
200X50			300	60	229	16.5	163	A-M06-200	

A-N05 Elastic rubber caster with nylon core,double ball bearings

						
125X50		180	52	158	16.5	A-N05-125
160X50		270	57	189	16.5	A-N05-160
200X50		350	60	229	16.5	A-N05-200

 
A-N06 Elastic rubber caster with nylon core,double ball bearings

							
125X50		180	52	158	16.5	148	A-N06-125
160X50		270	57	189	16.5	145	A-N06-160
200X50		350	60	229	16.5	163	A-N06-200

A-P05 PU caster with PP core, ball bearing

						
100X32		150	38	127	12.5	A-P05-100
125X32		200	35	150	12.5	A-P05-125

 
A-P06 PU caster with PP core, ball bearing

							
100X32		150	37	127	12.5	104	A-P06-100
125X32		200	35	150	12.5	108	A-P06-125

 
 
 
A-Z05 Black elastic rubber caster with steel core, double ball bearings

						
100X32		180	38	127	12.5	A-Z05-100-PU
125X38		230	35	150	12.5	A-Z05-125-PU

 
 
A-Z05-PU PU caster with steel core, double ball bearings

						
100X32		130	38	127	12.5	A-Z05-100
125X38		160	35	150	12.5	A-Z05-125

A-Z06 Black elastic rubber caster with steel core, double ball bearings

							
100X32		130	37	127	12.5	104	A-Z06-100
125X38		160	35	150	12.5	108	A-Z06-125

 
 
A-Z06-PU PU caster with steel core, double ball bearings

							
100X32		180	37	127	12.5	104	A-Z06-100-PU
125X38		230	35	150	12.5	108	A-Z06-125-PU

I-A05 TPR caster with PP core, ball bearing

						
75X25		70	27	98	10.5	I-A05-75
100X32		110	33	124	12.5	I-A05-100
125X32		130	40	152	12.5	I-A05-125

J-B05 TPR caster with PP core, plain bearing

						
80X24		75	27	100.5	10.5	J-B05-80

J-C05 PU caster with PP core, plain bearing

						
80X24		75	27	100.5	10.5	J-C05-80

 
 
J-D05 Nylon caster, plain bearing, PP caster is available

						
75X22		85	27	98	10.5	J-D05-75

A-A05 Rubber caster with steel core, roller bearing or plain bearing

							
80×32		70	35	109	12.5	A-A05-80	A-A05-80-1
100×32		90	38	127	12.5	A-A05-100	A-A05-100-1
125×37		120	35	150	12.5	A-A05-125	A-A05-125-1
150×37		170	57	184	16.5	A-A05-150	A-A05-150-1
160×40		200	57	189	16.5	A-A05-160	A-A05-160-1
180×50		210	60	219	16.5	A-A05-180	A-A05-180-1
200×50		230	60	229	16.5	A-A05-200	A-A05-200-1

A-A06 Rubber caster with steel core, roller bearing or plain bearing

								
80×32		70	35	109	12.5	101	A-A06-80	A-A06-80-1
100×32		90	37	127	12.5	104	A-A06-100	A-A06-100-1
125×37		120	35	150	12.5	108	A-A06-125	A-A06-125-1
150×37		170	57	184	16.5	145	A-A06-150	A-A06-150-1
160×40		200	57	189	16.5	145	A-A06-160	A-A06-160-1
200×50		230	60	229	16.5	163	A-A06-200	A-A06-200-1

A-B05 Rubber caster with PP core, roller bearing or plain bearing

									
		kg	kg					(Roller bearing)	(Plain bearing)
80X30		60		50	35	109	12.5	A-B05-80	A-B05-80-1
100X30		75		60	38	127	12.5	A-B05-100	A-B05-100-1
125X37		120		100	35	150	12.5	A-B05-125	A-B05-125-1
160X40		140		140	57	189	16.5	A-B05-160	A-B05-160-1
200X50		200		200	60	229	16.5	A-B05-200	A-B05-200-1
250X50		250			60	286.5	16.5	A-B05-250	

A-B06 Rubber caster with PP core, roller bearing or plain bearing

									
		kg	kg					(Roller bearing)	(Plain bearing)
80X30		60		50	35	109	12.5	101	A-B06-80
100X30		75		60	37	127	12.5	104	A-B06-100
125X37		120		100	35	150	12.5	108	A-B06-125
160X40		140		140	57	189	16.5	145	A-B06-160
200X50		200		200	60	229	16.5	163	A-B06-200

A-C05 Gray rubber caster with steel core, roller bearing or plain bearing

								
		kg					(Roller bearing)	(Plain bearing)
80X32			70	35	109	12.5	A-C05-80	A-C05-80-1
100X32			90	38	127	12.5	A-C05-100	A-C05-100-1
125X37			120	35	150	12.5	A-C05-125	A-C05-125-1
150X37			170	57	184	16.5	A-C05-150	A-C05-150-1
160X40			200	57	189	16.5	A-C05-160	A-C05-160-1
180X50			210	60	219	16.5	A-C05-180	A-C05-180-1
200X50			230	60	229	16.5	A-C05-200	A-C05-200-1

A-C06 Gray rubber caster with steel core, roller bearing or plain bearing

								 (Roller bearing)	 (Plain bearing)
80×32			70	35	109	12.5	101	A-C06-80	A-C06-80-1
100×32			90	37	127	12.5	104	A-C06-100	A-C06-100-1
125×37			120	35	150	12.5	108	A-C06-125	A-C06-125-1
150×37			170	57	184	16.5	145	A-C06-150	A-C06-150-1
160×40			200	57	189	16.5	145	A-C06-160	A-C06-160-1
200×50			230	60	229	16.5	163	A-C06-200	A-C06-200-1

A-D05 Gray rubber wheel with gray PP core, roller bearing or plain bearing

								  (Roller bearing)	  (Plain bearing)
80X30		60		50	35	109	12.5	A-D05-80	A-D05-80-1
100X30		75		60	38	127	12.5	A-D05-100	A-D05-100-1
125X37		120		100	35	150	12.5	A-D05-125	A-D05-125-1
160X40		140		140	57	189	16.5	A-D05-160	A-D05-160-1
200X50		200		200	60	229	16.5	A-D05-200	A-D05-200-1

A-D06 Gray rubber wheel with gray PP core, roller bearing or plain bearing

										
80X30		60		50	35	109	12.5	101	A-D06-80	A-D06-80-1
100X30		75		60	37	127	12.5	104	A-D06-100	A-D06-100-1
125X37		120		100	35	150	12.5	108	A-D06-125	A-D06-125-1
160X40		140		140	57	189	16.5	145	A-D06-160	A-D06-160-1
200X50		200		200	60	229	16.5	163	A-D06-200	A-D06-200-1

A-E05 TPR caster with PP core, roller bearing

						
80X32		80	35	109	12.5	A-E05-80
100X34		90	38	127	12.5	A-E05-100
125X37		120	35	150	12.5	A-E05-125
160X40		160	57	189	16.5	A-E05-160
200X50		210	60	229	16.5	A-E05-200

A-E06 TPR caster with PP core, roller bearing

							
80X32		80	35	109	12.5	101	A-E06-80
100X34		90	37	127	12.5	104	A-E06-100
125X37		120	35	150	12.5	108	A-E06-125
160X40		160	57	189	16.5	145	A-E06-160
200X50		210	60	229	16.5	163	A-E06-200

A-EU05 Elastic rubber caster with nylon core, ball bearing

						
100X36		200	38	127	12.5	A-EU05-100
125X36		230	35	150	12.5	A-EU05-125
150X40		280	57	184	16.5	A-EU05-150
200X50		350	60	229	16.5	A-EU05-200

A-EU06 Elastic rubber caster with nylon core, ball bearing

							
100x36		200	37	127	12.5	104	A-EU06-100
125X36		230	35	150	12.5	108	A-EU06-125
150X40		280	57	184	16.5	145	A-EU06-150
200X50		350	60	229	16.5	163	A-EU06-200

A-F05 TPR caster with PP core, ball bearing

						
80X32		80	35	109	12.5	A-F05-80
100X32		110	38	127	12.5	A-F05-100
125X32		130	35	150	12.5	A-F05-125

A-F06 TPR caster with PP core, ball bearing

							
80X32		80	35	109	12.5	101	A-F06-80
100X32		110	37	127	12.5	104	A-F06-100
125X32		130	35	150	12.5	108	A-F06-125

A-G05 TPR caster with PP core, plain bearing

						
80X30		100	35	109	12.5	A-G05-80
100X30		120	38	127	12.5	A-G05-100
125X35		140	35	150	12.5	A-G05-125
160X40		160	57	189	16.5	A-G05-160
200X50		180	60	229	16.5	A-G05-200

A-G06 TPR caster with PP core, plain bearing

							
80X30		100	35	109	12.5	101	A-G06-80
100X30		120	37	127	12.5	104	A-G06-100
125X35		140	35	150	12.5	108	A-G06-125
160X40		160	57	189	16.5	145	A-G06-160
200X50		180	60	229	16.5	163	A-G06-200

A-H05 PU caster with nylon core, plain bearing

						
80X30		100	35	109	12.5	A-H05-80
100X30		120	38	127	12.5	A-H05-100
125X35		170	35	150	12.5	A-H05-125
125X40		220	52	158	16.5	A-H05-125-1
160X40		300	57	189	16.5	A-H05-160
200X50		350	60	229	16.5	A-H05-200

A-H06 PU caster with nylon core, plain bearing

							
80X30		100	35	109	12.5	101	A-H06-80
100X30		120	37	127	12.5	104	A-H06-100
125X35		170	35	150	12.5	108	A-H06-125-1
160X40		300	57	189	16.5	145	A-H06-160
200X50		350	60	229	16.5	163	A-H06-200

A-I05 PU caster with PP core, double ball bearings

						
125X40		250	52	158	16.5	A-I05-125
160X40		300	57	189	16.5	A-I05-160
200X50		350	60	229	16.5	A-I05-200

A-I06 PU caster with PP core, double ball bearings

							
125X40		250	52	158	16.5	148	A-I06-125
160X40		300	57	189	16.5	145	A-I06-160
200X50		350	60	229	16.5	163	A-I06-200

A-J05 Nylon caster, plain bearing or roller bearing

							 (Roller bearing)	 (Plain bearing)
80X30			150	35	109	12.5	A-J05-80	A-J05-80-1
100X32			200	38	127	12.5	A-J05-100	A-J05-100-1
125X38			230	35	150	12.5	A-J05-125	A-J05-125-1
152X40			350	57	185	16.5	A-J05-152	A-J05-152-1
200X48			400	60	229	16.5	A-J05-200	A-J05-200-1

A-J06 Nylon caster, plain bearing or roller bearing

								 (Roller bearing)	 (Plain bearing)
80X30			150	35	109	12.5	101	A-J06-80	A-J06-80-1
100X32			200	37	127	12.5	104	A-J06-100	A-J06-100-1
125X38			230	35	150	12.5	108	A-J06-125	A-J06-125-1
152X40			350	57	185	16.5	145	A-J06-152	A-J06-152-1
200X48			400	60	229	16.5	163	A-J06-200	A-J06-200-1

A-K05 PP caster, plain bearing or roller bearing

							 (Roller bearing)	 (Plain bearing)
80X30			150	35	109	12.5	A-K05-80	A-K05-80-1
100X32			200	38	127	12.5	A-K05-100	A-K05-100-1
125X38			230	35	150	12.5	A-K05-125	A-K05-125-1
152X40			350	57	185	16.5	A-K05-152	A-K05-152-1
200X48			400	60	229	16.5	A-K05-200	A-K05-200-1

A-K06 PP caster, plain bearing or roller bearing

								 (Roller bearing)	 (Plain bearing)
80X30			150	35	109	12.5	101	A-K06-80	A-K06-80-1
100X32			200	37	127	12.5	104	A-K06-100	A-K06-100-1
125X38			230	35	150	12.5	108	A-K06-125	A-K06-125-1
152X40			350	57	185	16.5	145	A-K06-152	A-K06-152-1
200X48			400	60	229	16.5	163	A-K06-200	A-K06-200-1

A-L05 PP sandwich caster, roller bearing

						
100X32		110	38	127	12.5	A-L05-100
125X35		150	35	150	12.5	A-L05-125

A-L06 PP sandwich caster, roller bearing

100X32		110	37	127	12.5	104	A-L06-100
125X35		150	35	150	12.5	108	A-L06-125

Алматы (7273)495-231
 Ангaрск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Кургaн (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru