

Алматы (7273)495-231
 Ангарск (3955)60-70-56
 Архангельск (8182)63-90-72
 Астрахань (8512)99-46-04
 Барнаул (3852)73-04-60
 Белгород (4722)40-23-64
 Благовещенск (4162)22-76-07
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Владикавказ (8672)28-90-48
 Владимир (4922)49-43-18
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Иркутск (395)279-98-46
 Казань (843)206-01-48
 Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Коломна (4966)23-41-49
 Кострома (4942)77-07-48
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Курган (3522)50-90-47
 Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Ноябрьск (3496)41-32-12
 Новосибирск (383)227-86-73
 Омск (3812)21-46-40
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Петрозаводск (8142)55-98-37
 Псков (8112)59-10-37
 Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78
 Севастополь (8692)22-31-93
 Саранск (8342)22-96-24
 Симферополь (3652)67-13-56
 Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Сургут (3462)77-98-35
 Сыктывкар (8212)25-95-17
 Тамбов (4752)50-40-97
 Тверь (4822)63-31-35

Тольятти (8482)63-91-07
 Томск (3822)98-41-53
 Тула (4872)33-79-87
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Улан-Удэ (3012)59-97-51
 Уфа (347)229-48-12
 Хабаровск (4212)92-98-04
 Чебоксары (8352)28-53-07
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Чита (3022)38-34-83
 Якутск (4112)23-90-97
 Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru

Industrial Rollers with threaded screw



A-B07 Rubber caster with PP core, roller bearing or plain bearing

									(Roller bearing)	(Plain bearing)
80X30		60		50	35	109	12	35	A-B07-80	A-B07-80-1
100X30		75		60	38	127	12	35	A-B07-100	A-B07-100-1
125X37		120		100	35	150	12	35	A-B07-125	A-B07-125-1
160X40		140		140	57	189	16	40	A-B07-160	A-B07-160-1
200X50		200		200	60	229	16	40	A-B07-200	A-B07-200-1
250X50		250			60	286.5	16	40	A-B07-250	

A-B08 Rubber caster with PP core, roller bearing or plain bearing

										 (Roller bearing)	 (Plain bearing)
80X30		60		50	35	109	12	35	101	A-B08-80	A-B08-80-1
100X30		75		60	37	127	12	35	104	A-B08-100	A-B08-100-1
125X37		120		100	35	150	12	35	108	A-B08-125	A-B08-125-1
160X40		140		140	57	189	16	40	145	A-B08-160	A-B08-160-1
200X50		200		200	60	229	16	40	163	A-B08-200	A-B08-200-1

A-C07 Gray rubber caster with steel core, roller bearing or plain bearing

										
								(Roller bearing)	(Plain bearing)	
80×32			70	109	35	12	35	A-C07-80	A-C07-80-1	
100×32			90	127	38	12	35	A-C07-100	A-C07-100-1	
125×37			120	150	35	12	35	A-C07-125	A-C07-125-1	
150×37			170	184	57	16	40	A-C07-150	A-C07-150-1	
160×40			200	189	57	16	40	A-C07-160	A-C07-160-1	
180×50			210	219	60	16	40	A-C07-180	A-C07-180-1	
200×50			230	229	60	16	40	A-C07-200	A-C07-200-1	

A-C08 Gray rubber caster with steel core, roller bearing or plain bearing

										
									(Roller bearing)	(Plain bearing)
80×32			70	109	35	12	35	101	A-C08-80	A-C08-80-1
100×32			90	127	37	12	35	104	A-C08-100	A-C08-100-1
125×37			120	150	35	12	35	108	A-C08-125	A-C08-125-1
150×37			170	184	57	16	40	145	A-C08-150	A-C08-150-1
160×40			200	189	57	16	40	145	A-C08-160	A-C08-160-1
200×50			230	229	60	16	40	163	A-C08-200	A-C08-200-1

A-D07 Gray rubber wheel with gray PP core, roller bearing or plain bearing

										
									(Roller bearing)	(Plain bearing)
80X30		60		50	109	35	12	35	A-D07-80	A-D07-80-1
100X30		75		60	127	38	12	35	A-D07-100	A-D07-100-1
125X37		120		100	150	35	12	35	A-D07-125	A-D07-125-1
160X40		140		140	189	57	16	40	A-D07-160	A-D07-160-1
200X50		200		200	229	60	16	40	A-D07-200	A-D07-200-1

A-D08 Gray rubber wheel with gray PP core, roller bearing or plain bearing

											
80X30		60		50	109	35	12	35	101	A-D08-80	A-D08-80-1
100X30		75		60	127	78	12	35	104	A-D08-100	A-D08-100-1
125X37		120		100	150	35	12	35	108	A-D08-125	A-D08-125-1
160X40		140		140	189	57	16	40	145	A-D08-160	A-D08-160-1
200X50		200		200	229	60	16	40	163	A-D08-200	A-D08-200-1

A-E07 TPR caster with PP core, roller bearing

							
100x36		200	127	38	12	35	A-EU07-100
125X36		230	150	35	12	35	A-EU07-125
150X40		280	184	57	16	40	A-EU07-150
200X50		350	229	60	16	40	A-EU07-200

A-E08 TPR caster with PP core, roller bearing

								
100x36		200	127	37	12	35	104	A-EU08-100
125X36		230	150	35	12	35	108	A-EU08-125
150X40		280	184	57	16	40	145	A-EU08-150
200X50		350	229	60	16	40	163	A-EU08-200

A-EU07 Elastic rubber caster with nylon core, ball bearing

							
100x36		200	127	38	12	35	A-EU07-100
125X36		230	150	35	12	35	A-EU07-125
150X40		280	184	57	16	40	A-EU07-150
200X50		350	229	60	16	40	A-EU07-200

A-EU08 Elastic rubber caster with nylon core, ball bearing

								
100x36		200	127	37	12	35	104	A-EU08-100
125x36		230	150	35	12	35	108	A-EU08-125
150x40		280	184	57	16	40	145	A-EU08-150
200x50		350	229	60	16	40	163	A-EU08-200

A-F07 TPR caster with PP core, ball bearing

							
80x32		80	109	35	12	35	A-F07-80
100x32		110	127	38	12	35	A-F07-100
125x32		130	150	35	12	35	A-F07-125

A-F08 TPR caster with PP core, ball bearing

								
80x32		80	109	35	12	35	101	A-F08-80
100x32		110	127	37	12	35	104	A-F08-100
125x32		130	150	35	12	35	108	A-F08-125

A-G07 TPR caster with PP core, plain bearing

							
80x30		100	109	35	12	35	A-G07-80
100x30		120	127	38	12	35	A-G07-100
125x35		140	150	35	12	35	A-G07-125
160x40		160	189	57	16	40	A-G07-160
200x50		180	229	60	16	40	A-G07-200

A-G08 TPR caster with PP core, plain bearing

								
80X30		100	109	35	12	35	101	A-G08-80
100X30		120	127	37	12	35	104	A-G08-100
125X35		140	150	35	12	35	108	A-G08-125
160X40		160	189	57	16	40	145	A-G08-160
200X50		180	229	60	16	40	163	A-G08-200

A-H07 PU caster with nylon core, plain bearing

							
80X30		100	109	35	12	35	A-H07-80
100X30		120	127	38	12	35	A-H07-100
125X35		170	150	35	12	35	A-H07-125
125X40		220	158	52	16	40	A-H07-125-1
160X40		300	189	57	16	40	A-H07-160
200X50		350	229	60	16	40	A-H07-200

 
 
 
 
 
 
 
A-H08 PU caster with nylon core, plain bearing

								
80X30		100	109	35	12	35	101	A-H08-80
100X30		120	127	37	12	35	104	A-H08-100
125X35		170	150	35	12	35	108	A-H08-125-1
160X40		300	189	57	16	40	145	A-H08-160
200X50		350	229	60	16	40	163	A-H08-200

 
 
 
 
 
 
 
 
A-I07 PU caster with PP core, double ball bearings

							
125X40		250	158	52	16	40	A-I07-125
160X40		300	189	57	16	40	A-I07-160
200X50		350	229	60	16	40	A-I07-200

 
 
 
 
 
 
 
A-I08 PU caster with PP core, double ball bearings

								
125X40		250	158	52	16	40	148	A-I08-125
160X40		300	189	57	16	40	145	A-I08-160
200X50		350	229	60	16	40	163	A-I08-200

 
 
 
 
 
 
 
 
 
 
A-J07 Nylon caster, plain bearing or roller bearing

								
							(Roller bearing)	(Plain bearing)
80X30		150	109	35	12	35	A-J07-80	A-J07-80-1
100X32		200	127	38	12	35	A-J07-100	A-J07-100-1
125X38		230	150	35	12	35	A-J07-125	A-J07-125-1
152X40		350	185	57	16	40	A-J07-152	A-J07-152-1
200X48		400	229	60	16	40	A-J07-200	A-J07-200-1

A-J08 Nylon caster, plain bearing or roller bearing

								
							(Roller bearing)	(Plain bearing)
80X30		150	109	35	12	35	101	A-J08-80
100X32		200	127	37	12	35	104	A-J08-100
125X38		230	150	35	12	35	108	A-J08-125
152X40		350	185	57	16	40	145	A-J08-152
200X48		400	229	60	16	40	163	A-J08-200

A-K07 PP caster, plain bearing or roller bearing

								
							(Roller bearing)	(Plain bearing)
80X30		150	109	35	12	35	A-K07-80	A-K07-80-1
100X32		200	127	38	12	35	A-K07-100	A-K07-100-1
125X38		230	150	35	12	35	A-K07-125	A-K07-125-1
152X40		350	185	57	16	40	A-K07-152	A-K07-152-1
200X48		400	229	60	16	40	A-K07-200	A-K07-200-1

A-K08 PP caster, plain bearing or roller bearing

									 (Roller bearing)	 (Plain bearing)
80X30			150	109	35	12	35	101	A-K08-80	A-K08-80-1
100X32			200	127	37	12	35	104	A-K08-100	A-K08-100-1
125X38			230	150	35	12	35	108	A-K08-125	A-K08-125-1
152X40			350	185	57	16	40	145	A-K08-152	A-K08-152-1
200X48			400	229	60	16	40	163	A-K08-200	A-K08-200-1

A-L07 PP sandwich caster, roller bearing

							
100X32		110	127	38	12	35	A-L07-100
125X35		150	150	35	12	35	A-L07-125

A-L08 PP sandwich caster, roller bearing

								
100X32		110	127	37	12	35	104	A-L08-100
125X35		150	150	35	12	35	108	A-L08-125

A-M09 Elastic rubber caster with nylon core, roller bearing or plain bearing

								
125X50		150	140X110	105X80	13X11	161	52	A-M09-125
160X50		250	140X110	105X80	13X11	193	57	A-M09-160
200X50		300	140X110	105X80	13X11	232	60	A-M09-200

A-N09 Elastic rubber caster with nylon core, ball bearing

								
125X50		180	140X110	105X80	13X11	161	52	A-N09-125
160X50		270	140X110	105X80	13X11	193	57	A-N09-160
200X50		350	140X110	105X80	13X11	232	60	A-N09-200

A-N07 Elastic rubber caster with nylon core,double ball bearings

							
125X50		180	158	52	16	40	A-N07-125
160X50		270	189	57	16	40	A-N07-160
200X50		350	229	60	16	40	A-N07-200

A-N08 Elastic rubber caster with nylon core,double ball bearings

								
125X50		180	158	52	16	40	148	A-N08-125
160X50		270	189	57	16	40	145	A-N08-160
200X50		350	229	60	16	40	163	A-N08-200

A-P07 PU caster with PP core, ball bearing

							
100X32		150	127	38	12	35	A-P07-100
125X32		200	150	35	12	35	A-P07-125

 
A-P08 PU caster with PP core, ball bearing

							
100X32		150	127	37	12	35	104
125X32		200	150	35	12	35	108

 
 
A-Z07 Black elastic rubber caster with steel core, double ball bearings

						
100X32		130	127	38	M12X35	A-Z07-100
125X38		160	150	35	M12X35	A-Z07-125

 
 
A-Z07-PU PU caster with steel core, double ball bearings

						
100X32		180	127	38	M12X35	A-Z07-100-PU
125X38		230	150	35	M12X35	A-Z07-125-PU

A-Z08 Black elastic rubber caster with steel core, double ball bearings

							
100X32		130	127	37	M12X35	104	A-Z08-100
125X38		160	150	35	M12X35	108	A-Z08-125

A-Z08-PU PU caster with steel core, double ball bearings

							
100X32		180	127	37	M12X35	104	A-Z08-100-PU
125X38		230	150	35	M12X35	108	A-Z08-125-PU

A-A07 Rubber caster with steel core, roller bearing or plain bearing

										
								(Roller bearing)	(Plain bearing)	
80×32			70	109	35	M12	35	A-A07-80	A-A07-80-1	
100×32			90	127	38	M12	35	A-A07-100	A-A07-100-1	
125×37			120	150	35	M12	35	A-A07-125	A-A07-125-1	
150×37			170	184	57	M16	40	A-A07-150	A-A07-150-1	
160×40			200	189	57	M16	40	A-A07-160	A-A07-160-1	
180×50			210	219	60	M16	40	A-A07-180	A-A07-180-1	
200×50			230	229	60	M16	40	A-A07-200	A-A07-200-1	

A-A08 Rubber caster with steel core, roller bearing or plain bearing

									 (Roller bearing)	 (Plain bearing)
80×32			70	109	35	M12	35	101	A-A08-80	A-A08-80-1
100×32			90	127	37	M12	35	104	A-A08-100	A-A08-100-1
125×37			120	150	35	M12	35	108	A-A08-125	A-A08-125-1
150×37			170	184	57	M16	40	145	A-A08-150	A-A08-150-1
160×40			200	189	57	M16	40	145	A-A08-160	A-A08-160-1
200×50			230	229	60	M16	40	163	A-A08-200	A-A08-200-1

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://longway.nt-rt.ru/> || yaw@nt-rt.ru